

‘Quad Cruise’ Electronic Cruise & Spray Control for Polaris Ranger 700 2006 (not equipped with OE speedometer)



Quad Cruise is a new version of the MotorCycle Setup cruise control that is designed to operate at speeds from 4 km/h. It has also been designed to provide power to any crop spray system fitted to the bike - either manually, or only when the cruise control is engaged, via a 10 amp power outlet that is incorporated into the wiring loom. This means that spray operation occurs only when the bike's speed is held at the appropriate set speed on the cruise control.

The cruise control can be set to a specific speed to spray a row by pressing the SET button, turned off at the end of the row with either front or rear brake operation. The RES button can be used to set the bike's speed back to the previous speed. The spray system will turn on and off with the cruise control, when the spray switch is in the AUTO position.

Every effort has been made to make the cruise control waterproof. The new computer is fully sealed, as is the electric actuator. Wherever possible sealed connectors have been used on the wiring harness.

The following provides a brief description of the power consumption and component locations of the MotorCycle Setup electronic speed and spray control.

Current draw while the cruise control is switched on, but not engaged, is approximately 0.020 amp (0.28 watts). Current draw while the cruise control is engaged is nominally 0.5 amp (6 Watts) with peak draw at 2 amp (24 Watts). By comparison, a head light bulb typically draws about 4 amps (55 Watts), and a tail light bulb (running light) draws about 0.4 amp (5 Watts).

Installed weight of the cruise control is approximately 3kg.

Refer to the line drawing on the back of this sheet to identify the component numbers in the text.

The **Computer (1)** is mounted in the front compartment. It is screwed to the top of the right side dashboard storage compartment.



The **Electric Actuator or throttle servo (2)** is mounted to the frame below the drivers seat. An **Actuator cable (3)** connects the actuator to the CIU (see below).

The **‘Cable Interface Unit’ (CIU) (4)** is located beside the fuel injection throttle body under the seat and is mounted on the top engine mount. A new **cable (5)** is provided to connect the CIU to the throttle body. The existing throttle cable is disconnected from the throttle body and is reconnected to the CIU. A cable from the actuator is also connected to the CIU.



The **Control Switch (6)** may be mounted on top of the dashboard (shown in the photo) or may be mounted inside the dashboard storage compartment.



On 4X4 models, a **Tone Wheel (7)** is fitted to the drive shaft to the front axle. A **Speed Sensor (8)** is fitted to the vehicle frame.



On 2X4 models, a **Polaris speed sensor (9)** is supplied with the cruise control kit and is fitted to the right front wheel hub assembly.

The **Wiring Loom (10)** is dedicated to the vehicle. Power for the cruise control is sourced from the vehicle accessory power post. Brake sensing is sourced from the brake light switch. Neutral gear sensing is sourced from the vehicle's neutral light switch. Speed signal is sourced from the speed sensor provided in the kit. Earth (ground) is sourced from the battery negative terminal. Power for the spray system is sourced from the battery positive terminal and a two pin plug is provided at the rear of the motorcycle for connection to the spray. Matching plug and terminals are provided in the kit for connection to the spray unit.

